



Cisco DECT 6800 – How to Lock/Unlock Dial Pad on Handset

The Cisco 6800 DECT handset will allow you to disable or manually lock the keypad to stop accidental dialing. When you lock the keypad, the softkey label does not display.

Procedure on how to lock the handset:



Press and hold Zero (0)  until the message “Press and hold 0” and the key lock icon is displayed on the screen.

Procedure on how to unlock the handset:

Press and hold Zero (0)  until the message “Press and hold *” and the key lock icon does not display on the screen.

You can set up the handset to require a PIN to unlock it.

Procedure to set up handset unlock PIN:

1. Press Menu 
2. Select Settings  >Security>Phone lock.
3. Enter the PIN and press **OK**.
4. Highlight Phone lock.
5. Press **Off** to turn off the need for a PIN or **On** to require a PIN.
6. Select **Change PIN**.
7. Enter a new PIN and press **OK**. You must use four digits for the PIN.
8. Press **Select** to save the setting.



Note: The default PIN is 0000

Note: When the keypad is locked, you can only dial emergency numbers.

Set the Timer to Automatically Lock the Handset

You can set the handset to lock the keypad after a specific length of inactivity. When the keypad locks, you need to unlock it before you can use it.

Procedure:

1. Press Menu 
2. Select Settings  → Security → Automatic key lock.
3. Highlight your choice.
 - Off (default): The keypad never locks.
 - 15 seconds: The keypad locks in 15 seconds.
 - 30 seconds: The keypad locks in 30 seconds.
 - 45 seconds: The keypad locks in 45 seconds.
 - 1 minute: The keypad locks in 1 minute.
 - 2 minutes: The keypad locks in 2 minutes.
 - 3 minutes: The keypad locks in 3 minutes.
 - 4 minutes: The keypad locks in 4 minutes.
 - 5 minutes: The keypad locks in 5 minutes.
4. Press **Select** to save the setting.

Note: When the keypad is locked, you can only dial emergency numbers.