


USER GUIDE | CLOUD COMMUNICATIONS

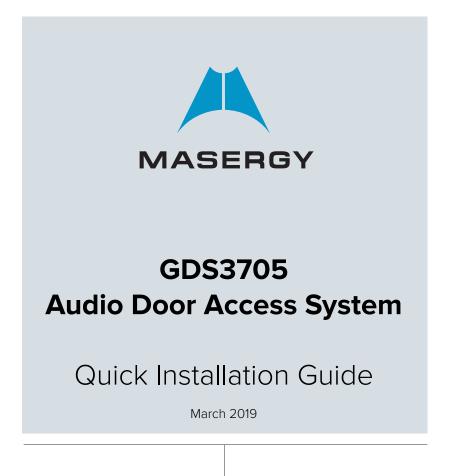

PRECAUTIONS

 
- Do not attempt to disassemble or modify the device
- Strictly follow the requirement of power source

 
MASERGY

- Do not expose this device to temperatures out the range of -30 °C to 60 °C for operating and -35 °C to 60 °C for storage
- Do not expose this device to environments outside of the following humidity range: 10-90% RH (non-condensing)
- Please strictly follow the instruction to install or hire professionals to install properly

PACKAGE CONTENTS







1 x GDS3705

1 x Installation Bracket

1 x Drilling Template



3x Rubber Gaskets





6 x Bracket Screws and Anchors



4 x Anti-tamper Screws



1 x RFID Card 1 x RFID Key Fob

 
U





1 x Frame Back Cover

2



1 x Wiegand Cable



1 x Quick Installation Guide 1 x GPL License




MOUNTING GDS3705

On-Wall (Surface) Mounting

MASERGY


Step 1:

Refer to the "drilling template" to drill holes at targeted place on wall then mount the installation bracket using the four screws and anchors provided (screwdriver not provided). Connect and tighten "Ground" wire (if available) to the bracket ground marked with printed icon $\frac{1}{2}$.

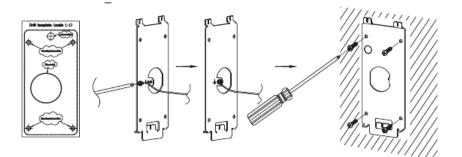

Step 2:

Pull Cat5e or Cat6 cable (not provided) through the rubber gasket selecting the correct size and the back cover panel piece, please refer to "GDS3705 WIRING TABLE" at the end of QIG for Pin connections.

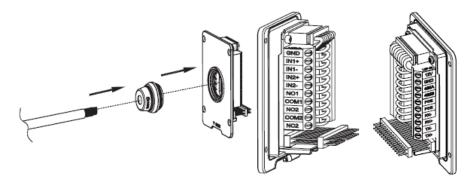

Note:


Needle nose plier highly recommended and 2.5mm flat screwdriver required (not provided). Stripping outer plastic shield of the cable in less than 2 inches suggested. Do NOT leave bare metal outside the socket by over stripping the inner plastic shield of the wires.



Step 3:


MASERGY

Make sure the "Back Cover Frame" is in place, the wired back cover panel is good. Flush the back cover panel piece with the whole back surface of device, tighten it using the screws provided.

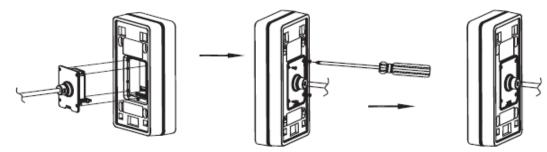


Step 4:

Take out the two preinstalled anti-tamper screws using the hex key provided. Carefully align the GDS3705 to the metal bracket on wall, press and pull the GDS3705 down to the right position.

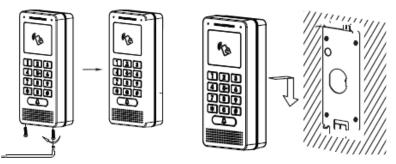

Step 5:

Install the two anti-tamper screws back using the hex key provided (do NOT over tighten the screws). Cover the two screw holes on the bottom of "Back Cover Frame" piece using the two silicon plugs provided. Final check and finish the installation.

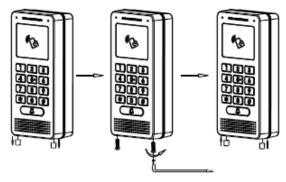



In-Wall (Embedded) Mounting

MASERGY

Please refer to the "In-Wall (Embedded) Mounting Kit", which can be purchased separately from Grandstream.


CONNECTING THE GDS3705

Refer to the illustration below and follow the instructions on the next page.

POWER OFF GDS3705 when connecting wires or inserting/removing the back cover panel piece!

Option A:

RJ45 Ethernet Cable to (Class 3) Power over Ethernet (PoE) Switch.

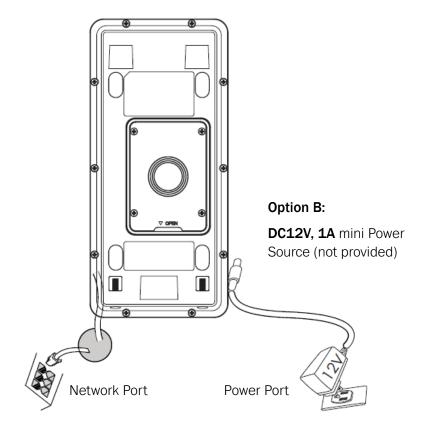

Note:

Choose Option A if using PoE switch (Class 3);

OR: Option B if using 3rd party power source.



Option A

Plug an RJ45 Ethernet cable into the (Class 3) Power over Ethernet (PoE) switch.

Option B

Step 1:

Select an external **DC12V**, **minimum 1A** power source (not provided). Wire correctly the "+,-" cable of the power into the "**12V**, **GND**" connector of the GDS3705 socket (refer to the previous mounting page for instruction). Connect the power source.

Step 2:

Plug an RJ45 Ethernet cable into a network switch/hub or router.

Note:

Please refer to "Step 2" of "MOUNTING GDS3705" and "GDS3705 WIRING TABLE" at the end of QIG for all the wiring and connection illustration and instructions.

GDS3705 CONFIGURATION

MASERG

The GDS3705 is by default configured to obtain the IP address from DHCP server where the unit is located.

In order to know which IP address is assigned to your GDS3705, please use GS Search tool as illustrated in following steps.

Note:

If no DHCP server is available, the GDS3705 default IP address (after 5 minutes DHCP timeout) is **192.168.1.168**.

Step 1: Download and install GS Search tool:

Step 2: Run the Grandstream GS Search tool on a computer connected to same network/ DHCP server.

Step 3: Click on Search button to start device detection.

Step 4: The detected devices will appear in the output field as show on the right.

inder Hodel 1 BOORDY GESTIN	13170	Descellars actives		17976a 10	APO Pu 1	NIC BED GOVERN
		(Jeen.)	- Fi	AM ()		
Addiev Collgador	1 2 3	- 				

Step 5:

Open the web browser and type the displayed IP address of GDS3705 with leading **https://** to access the web GUI. (For security reasons, the default web access of GDS3705 is using **HTTPS** and port **443**.)

Step 6:

Enter username and password to login.

MASERGY

(The default administrator username is "admin" and the default random password can be found at the sticker on the GDS3705). **Important: please do not remove this sticker from the GDS** door phone.

Note:

For security reasons, Masergy has already changed the default admin password.

Welcome to GDS3705				
1	Please enter the username			
≜	Please enter the password			
_	Forgot Password ?			
	Login			

Step 7:

After login into the WebGUI, click the left side menu in the web interface for more detailed and advanced configuration.

Refer to online documents and FAQ for more detailed information: <u>http://www.grandstream.com/our-products</u>



GDS3705 WIRING TABLE

MASERGY

Jack	Pin	Signal	Function		
	1	TX+ (Orange/White)			
	2	TX- (Orange)	-		
	3	RX+ (Green/White)	Ethernet, PoE 802.3af Class3.		
	4	RX- (Green)	12.95W		
J2 (Basic)	5	PoE_SP2 (Blue + Blue/White)	12.95W		
(Basic) 3.81mm	6	PoE_SP1 (Brown + Brown/White)			
5.611111	7	RS485_B			
	8	RS485_A	K5465		
	9	GND	Dower Supply		
	10	12V	Power Supply		
	1	GND	Alarm GND		
	2	ALARM1_IN+			
	3	ALARM1_IN-	Alarm In		
10	4	ALARM2_IN+			
J3 (Advanced)	5	ALARM2_IN-			
(Advanced) 3.81mm	6	N01	Alarm Out		
0.011111	7	COM1	Alam Out		
	8	N02			
	9	COM2	Electric Lock		
	10	NC2			
	1	GND (Black)	Wiegand Power GND		
	2	WG_D1_OUT (Orange)			
J4 (Special) 2.0mm	3	WG_D0_OUT (Brown)	Wiegand Output Signal		
	4	LED (Blue)	Wiegand Output LED Signal		
	5	WG_D1_IN (White)	Wiegand Input Signal		
2.0000	6	WG_DO_IN (Green)			
	7	Beep (Yellow)	Wiegand Output BEEP Signal		
	8	5V (Red)	Wiegand Power Output		

For more details regarding GDS3705 wiring, please refer to <u>User Manual</u>.




Electric Lock			GD	Door		
Туре	Power On	Power Off	NC2	N02	COM2	Normal Status
Fail Safe	Lock	Open			•	Lock
				•	•	Open
Fail Secure	Open	Lock		•	•	Lock
			•		•	Open
Noto						

Note:

• Please select the correct wiring based on different electric strike/lock and the normal status of door.

• Electric Magnetic Lock will work at Fail Safe mode ONLY.

MASERGY

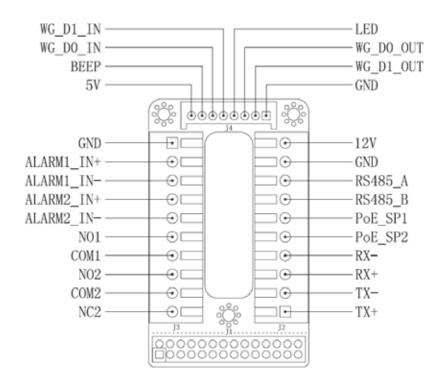

Note:

- **1**. Power PoE_SP1, PoE_SP2 with DC, the voltage range is 48V~57V, no polarity.
- 2. Power with PoE the cable wiring:
 - PoE_SP1, brown and brown/white binding
 - PoE_SP2, blue and blue/white binding
- 3. DC Power could be correctly sourced from qualified PoE Injector.

This product is covered by one or more of the U.S. patents (and any foreign patent counterparts thereto) identified at www.cmspatents.com.

9

